

WOLF ENDURANCE

CLEANING AND CARE INSTRUCTIONS

Thank you for your purchase of Wolf Endurance Outdoor Cabinetry. Regular cleaning and maintenance promotes the beauty and longevity of your products and ensures a lifetime of use.

We recommend regular care and cleaning of your Wolf Endurance cabinets to promote product life.

- Routinely wash away dirt and debris using a soft white cloth or sponge and a solution of warm water and a mild, non-abrasive detergent. Surfaces should be thoroughly rinsed to remove all residue, followed by gently wiping with a damp, non-abrasive cloth or sponge. Towel dry to prevent water spotting.
- CAUTION: The use of solvents, abrasives or dish soap will damage the product's finish.
- Cleaning every 6-9 months is especially important when cabinets are installed in areas affected by bodies of salt water and other adverse atmospheric environments.
- Nicks and dings to the cabinet surface should be touched up immediately with manufacturer's approved aerosol paint or marker.
- Always test any cleaning solution in an inconspicuous area before applying to the entire product.

Do not store objects on the surface for any extended periods of time as these can trap moisture and debris.

Do not place hot items directly on any part of the surface. Damage created by hot items can be minimized by cleaning and buffing, but will typically never be eliminated. This type of damage will not be covered under warranty.

CAUTION : Appliance and stainless steel cleaning solvents are harmful to your Wolf Endurance products' finish and should not come in contact with the surface at any time. Take care to spray the solvent onto a cloth and wipe only on the appliance surface.

Minimize the natural aging of your product by storing your cabinet in a dry, shaded area to reduce fading.

Light or superficial scratches to the finish are likely to occur during normal use and do not affect the integrity of the product.

